



# **Intel® Integrated Mirroring / Integrated Striping RAID for Intel® Server Boards SE7520JR2, SE7520AF2, SE7520BD2**

## ***Configuration Guide***

Revision 1.3

April, 2005

Enterprise Platforms and Services Division - Marketing

---

## Revision History

# *Revision History*

<b>Date</b>	<b>Revision Number</b>	<b>Modifications</b>
January 2005	1.0	Initial release.
April 2005	1.1	Updated release
July 2005	1.2	Additional instruction on Bios setup
Aug 2005	1.3	Add instruction on IM initialization

# *Disclaimers*

Information in this document is provided in connection with Intel® products. No license, express or implied, by estoppel or otherwise, to any intellectual property rights is granted by this document. Except as provided in Intel's Terms and Conditions of Sale for such products, Intel assumes no liability whatsoever, and Intel disclaims any express or implied warranty, relating to sale and/or use of Intel products including liability or warranties relating to fitness for a particular purpose, merchantability, or infringement of any patent, copyright or other intellectual property right. Intel products are not intended for use in medical, life saving, or life sustaining applications. Intel may make changes to specifications and product descriptions at any time, without notice.

Designers must not rely on the absence or characteristics of any features or instructions marked "reserved" or "undefined." Intel reserves these for future definition and shall have no responsibility whatsoever for conflicts or incompatibilities arising from future changes to them.

The Intel® Integrated RAID and/or the server boards mentioned in this guide may contain design defects or errors known as errata which may cause the product to deviate from published specifications. Current characterized errata are available on request.

Intel, Pentium, Itanium, and Xeon are trademarks or registered trademarks of Intel Corporation.

\*Other brands and names may be claimed as the property of others.

Copyright © Intel Corporation 2005.

## Disclaimers

# Table of Contents

<b>1. Integrated RAID Overview .....</b>	<b>7</b>
<b>2. Integrated RAID Implementation Guidelines .....</b>	<b>8</b>
2.1 Integrated Mirroring .....	8
2.2 Integrated Striping .....	8
<b>3. Quick Configuration Guide.....</b>	<b>9</b>
3.1 Enable IM or IS in System Bios setup .....	9
3.2 Integrated Mirroring Configuration Procedure .....	10
3.3 Integrated Striping Configuration Procedure .....	16

# List of Figures

Figure 1. SCSI Option ROM mode set to IM.....	9
Figure 2. SCSI Option ROM mode set to IS .....	9
Figure 3. System Boot Screen .....	10
Figure 4. Main Menu .....	10
Figure 5. Integrated Mirroring: Select Array Disk.....	11
Figure 6. Integrated Mirroring: Keep or Erase Data Query .....	12
Figure 7. Integrated Mirroring: Create Primary Disk .....	13
Figure 8. Integrated Mirroring: Create Hot Spare Disk .....	13
Figure 9. Integrated Mirroring: Save Changes .....	14
Figure 10. Integrated Mirroring: Return to Main menu.....	14
Figure 11. Integrated Mirroring: Confirm Exit the utility.....	15
Figure 12. Integrated Striping: System Boot Screen.....	16
Figure 13. Integrated Striping: Main Menu.....	17
Figure 14. Integrated Striping: Select Array Disk.....	17
Figure 15. Integrated Striping: Save Changes .....	18
Figure 16. Integrated Striping: RAID Status Screen .....	19

## List of Figures

< This page intentionally left blank. >

# 1. Integrated RAID Overview

---

The integrated RAID solution provides cost benefits for the server or workstation market where the extra performance, storage capacity, and/or redundancy of a RAID configuration are required. The two components of integrated RAID are:

- Integrated Mirroring (IM) provides features of RAID 1
- Integrated Striping (IS) provides features of RAID 0

By simplifying the IM and IS configuration options and by providing firmware support in its host adapters, integrated RAID can offer the integrated RAID solution at a lower cost than a full-blown RAID implementation.

This document provides a reference to expedite the configuration of integrated RAID.

## Notes:

- Integrated RAID offers advanced features including I/O performance with additional data security; however, there are several considerations of which to be aware.
- Only one RAID configuration (logical drive) is allowed.
- Integrated RAID may take an extended period of time to complete the initialization after the RAID setup. The amount of time required depends whether the initialization is completed within the BIOS-based utility or completed with the operating system-based utility. The amount of time required also depends on the complexity of the configuration and capability of the system being configured.
- Unlike a hardware controller, integrated RAID consumes system resources such as CPU cycles and system memory to handle I/O requests; in a situation where the CPU is heavily loaded, the I/O performance may drop significantly.

## 2. Integrated RAID Implementation Guidelines

---

### 2.1 Integrated Mirroring

Integrated Mirroring (IM) provides data protection for the system volume. The purpose is to safeguard critical information, such as the operating system.

IM can be set up with two hard disk drives to maintain high performance, as well as data availability and fault tolerance. If one disk drive fails, the hot swap drive mechanism allows the system to maintain operation while the failed disk drive can be replaced. In addition, the hot spare capability enables the system to automatically replace the defective drive with a standby disk.

IM requires extra time synchronization in BIOS mode as compared to the synchronization time in operating system mode. In BIOS mode (<Ctrl>+<C>), 1 hour for each 5 gigabytes of hard drive capacity is typically required to complete initializing the mirror. For example, for two 100 gigabyte drives configured in a RAID 1 mirroring, 18-20 hours should be allowed for the initialization to complete.

The IM firmware uses queue tagged I/Os to allow SCSI I/Os to continue on the IM volume while the volume is re-synchronized in the background. The host driver may optionally suspend the resynchronization operation while performing domain validation or while configuring Ultra320 SCSI expanders.

### 2.2 Integrated Striping

Integrated Striping (IS) is available for applications that require faster I/O performance and higher storage capacity for non critical data. With this option there is no drive failover. Failure of a drive results in a loss of all data on the drives holding the data stripe. By reading and writing data concurrently across several disks, IS offers excellent performance as compared to a single physical disk. However, the risk of data loss increases because a single disk failure will cause the loss of the entire logical drive.

The IS configuration is available only for new installations. Migration of data with existing disks is not supported.



### 3. Quick Configuration Guide

---

**Note:** Only one IM or IS logical drive can be created per controller; the two modes are mutually exclusive. Make sure the SCSI mode option in the system BIOS is set up correctly to support the Raid level mode needed before implementing an IS or IM configuration.

#### 3.1 Enable IM or IS in System Bios setup

Prior to configuring IM or IS, users are required to set related system Bios options correctly. To do so, during the system POST, press F2 to enter Bios setup, ensure the on Board SCSI Option ROM Mode option is set to desired mode, then save the configuration and reboot. Please refer to Intel® Server Board users guide on how to modify system Bios configuration. Figure 1 demonstrates that the SCSI Option ROM Mode is set to IM.

```

Onboard SCSI                [Enabled]
Onboard SCSI Option ROM Mode [IM/IME <RAID 1/1e>]
IOP ROMB <SROMBU42E>       Not Installed

Onboard Video               [Enabled]
Dual Monitor Video         [Disabled]
Onboard NIC                 [Enabled]
Onboard NIC ROM            [Enabled]
    
```

Figure 1. SCSI Option ROM mode set to IM

Figure 2 shows that the SCSI Option ROM Mode is set to IS.

```

Onboard SCSI                [Enabled]
Onboard SCSI Option ROM Mode [IS <RAID 0>]
IOP ROMB <SROMBU42E>       Not Installed

Onboard Video               [Enabled]
Dual Monitor Video         [Disabled]
Onboard NIC                 [Enabled]
Onboard NIC ROM            [Enabled]
    
```

Figure 2. SCSI Option ROM mode set to IS

### 3.2 Integrated Mirroring Configuration Procedure

Follow the steps listed below to set up the IM volume.

1. Press <Ctrl>+<C> during POST when prompted to do so by the RAID card BIOS. See the following figure.

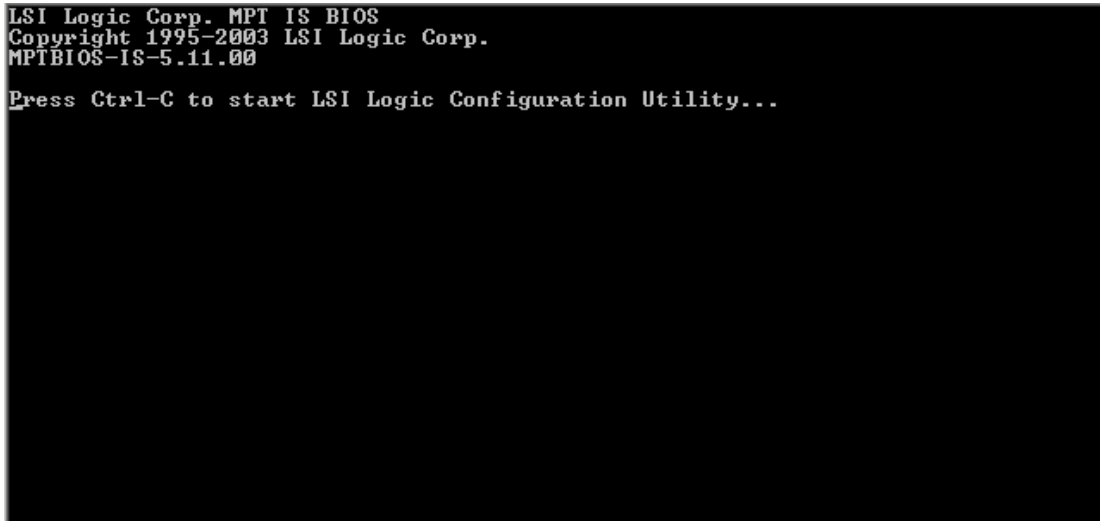


Figure 3. System Boot Screen

The main configuration screen is displayed, as shown below.



Figure 4. Main Menu

2. On the Main Menu, use the up and down arrow keys to locate the adapter.

- Press <Enter> to view the Adaptor properties. See the figure below.

```

LSI Logic MPT SCSI Setup Utility   Version  MPTBIOS-IME-5.10.01
RAID Properties   Array:  --  SCSI ID:  --  Size(MB):  -----
SCSI ID  Device Identifier  Array Disk?  Hot Spare  Status  Predict Failure  Size (MB)
0  MAXTOR ATLAS10K4_36SCA DFL0  [No]  [No]  -----  ---  35074
1  MAXTOR ATLAS10K4_36SCA DFU0  [No]  [No]  -----  ---  35074
2  MAXTOR ATLAS10K4_36SCA DFU0  [No]  [No]  -----  ---  35074
3  MAXTOR ATLAS10K4_36SCA DFU0  [No]  [No]  -----  ---  35074
4  MAXTOR ATLAS10K4_36SCA DFU0  [No]  [No]  -----  ---  35074
5  -  [No]  [----]  -----  ---  -----
6  ESG-SHU  [No]  [----]  -----  ---  -----
7  LSI1030  [No]  [----]  -----  ---  -----
8  -  [No]  [----]  -----  ---  -----
9  -  [No]  [----]  -----  ---  -----
10 -  [No]  [----]  -----  ---  -----
11 -  [No]  [----]  -----  ---  -----
12 -  [No]  [----]  -----  ---  -----
13 -  [No]  [----]  -----  ---  -----
14 -  [No]  [----]  -----  ---  -----
15 -  [No]  [----]  -----  ---  -----
Esc=Abort/Exit   ArrowKeys=Select Item  -/+ =Change [Item]
                  Home/End =Select Item  Enter=Execute <Item>
                                                    F4=Diagnostic
    
```

Figure 5. Integrated Mirroring: Select Array Disk

## Quick Configuration Guide

4. Use the arrow keys on the Select Array Disk screen to select the primary disk for IM.
5. Use the arrow keys to move to the “Array Disk?” column.
6. Press the <+> key to change the value in the “Array Disk?” column from “No” to “Yes”.
7. When the “Keep Data/Erase Disk” message appears, as shown below, press F3 to keep the data.

```
LSI Logic MPT SCSI Setup Utility  Version  MPTBIOS-IME-5.10.01

F3 - Keep  Data(Create 2 disk array)
Delete-Erase Disk(Create 2 to 6 disk array)

Esc=Abort/Exit  ArrowKeys=Select Item  -/+ =Change [Item]
Home/End =Select Item  Enter=Execute <Item>
F4=Diagnostic
```

Figure 6. Integrated Mirroring: Keep or Erase Data Query

## Intel Integrated RAID Configuration Guide

The hard disk drive is now the first disk of the array and the Status is changed to Primary. See the figure below.

```

LSI Logic MPT SCSI Setup Utility  Version  MPTBIOS-IME-5.10.01
RAID Properties  Array:  --  SCSI ID:  --  Size(MB):  -----
SCSI  Device Identifier  Array  Hot  Status  Predict  Size
ID    Device Identifier  Disk?  Spare  Status  Failure  (MB)
0     MAXTOR ATLAS10K4_36SCA  DFL0  [Yes] [No]  Primary  ----  35074
1     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
2     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
3     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
4     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
5     -                -                [No]  [----]  -----  ---  -----
6     ESG-SHU          -                [No]  [----]  -----  ---  -----
7     LSI1030          -                [No]  [----]  -----  ---  -----
8     -                -                [No]  [----]  -----  ---  -----
9     -                -                [No]  [----]  -----  ---  -----
10    -                -                [No]  [----]  -----  ---  -----
11    -                -                [No]  [----]  -----  ---  -----
12    -                -                [No]  [----]  -----  ---  -----
13    -                -                [No]  [----]  -----  ---  -----
14    -                -                [No]  [----]  -----  ---  -----
15    -                -                [No]  [----]  -----  ---  -----
Esc=Abort/Exit  ArrowKeys=Select Item  -/+ =Change [Item]
Home/End =Select Item  Enter=Execute <Item>
F4=Diagnostic
  
```

Figure 7. Integrated Mirroring: Create Primary Disk

8. Repeat steps 2 through 7 to select the second disk drive for IM.
9. (Optional) To set up a hot spare disk, use the arrow key to select the hard drive. Highlight the Hot Spare column and use the <+> key to change the value to "Yes". See the figure below.

```

LSI Logic MPT SCSI Setup Utility  Version  MPTBIOS-IME-5.10.01
RAID Properties  Array:  IM  SCSI ID:  0  Size(MB):  35068
SCSI  Device Identifier  Array  Hot  Status  Predict  Size
ID    Device Identifier  Disk?  Spare  Status  Failure  (MB)
0     MAXTOR ATLAS10K4_36SCA  DFL0  [Yes] [No]  Primary  ----  35074
1     MAXTOR ATLAS10K4_36SCA  DFV0  [Yes] [No]  -----  ---  35074
2     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
3     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [No]  -----  ---  35074
4     MAXTOR ATLAS10K4_36SCA  DFV0  [No]  [Yes]  -----  ---  35074
5     -                -                [No]  [----]  -----  ---  -----
6     ESG-SHU          -                [No]  [----]  -----  ---  -----
7     LSI1030          -                [No]  [----]  -----  ---  -----
8     -                -                [No]  [----]  -----  ---  -----
9     -                -                [No]  [----]  -----  ---  -----
10    -                -                [No]  [----]  -----  ---  -----
11    -                -                [No]  [----]  -----  ---  -----
12    -                -                [No]  [----]  -----  ---  -----
13    -                -                [No]  [----]  -----  ---  -----
14    -                -                [No]  [----]  -----  ---  -----
15    -                -                [No]  [----]  -----  ---  -----
Esc=Abort/Exit  ArrowKeys=Select Item  -/+ =Change [Item]
Home/End =Select Item  Enter=Execute <Item>
F4=Diagnostic
  
```

Figure 8. Integrated Mirroring: Create Hot Spare Disk

## Quick Configuration Guide

- Press the <Esc> key to exit the configuration screen.
- Select “<Save changes then exit this menu>” and press <Enter> to confirm the change to return to the main menu, or select “<Cancel Exit>” to continue the configuration.

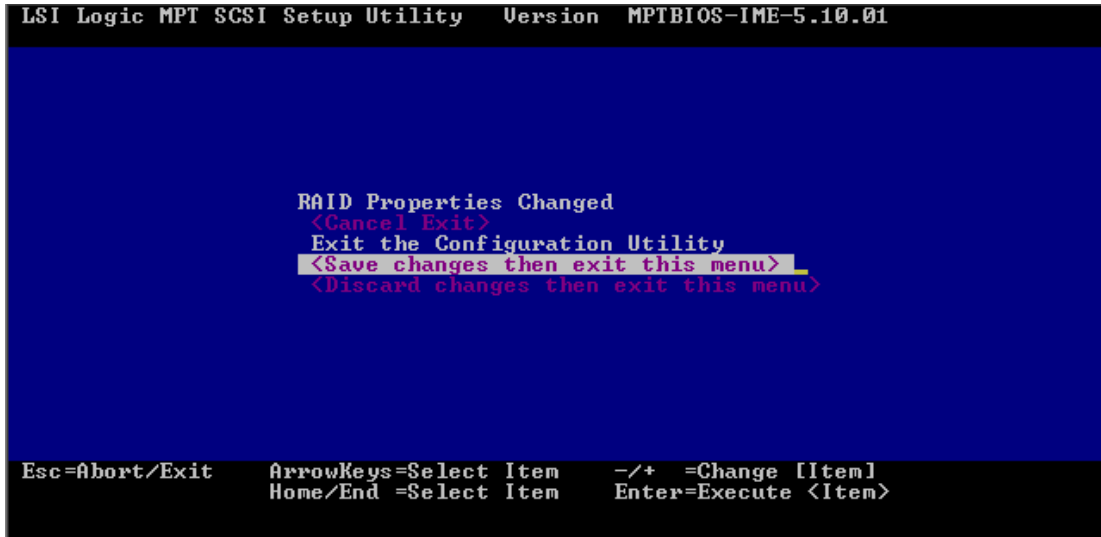


Figure 9. Integrated Mirroring: Save Changes

- The IM volume is created and the synchronization starts immediately after choosing “<Save changes then exit this menu>” in step 12. On the Main menu, you will see below picture indicating the Raid drive is in “Resyncing” status.

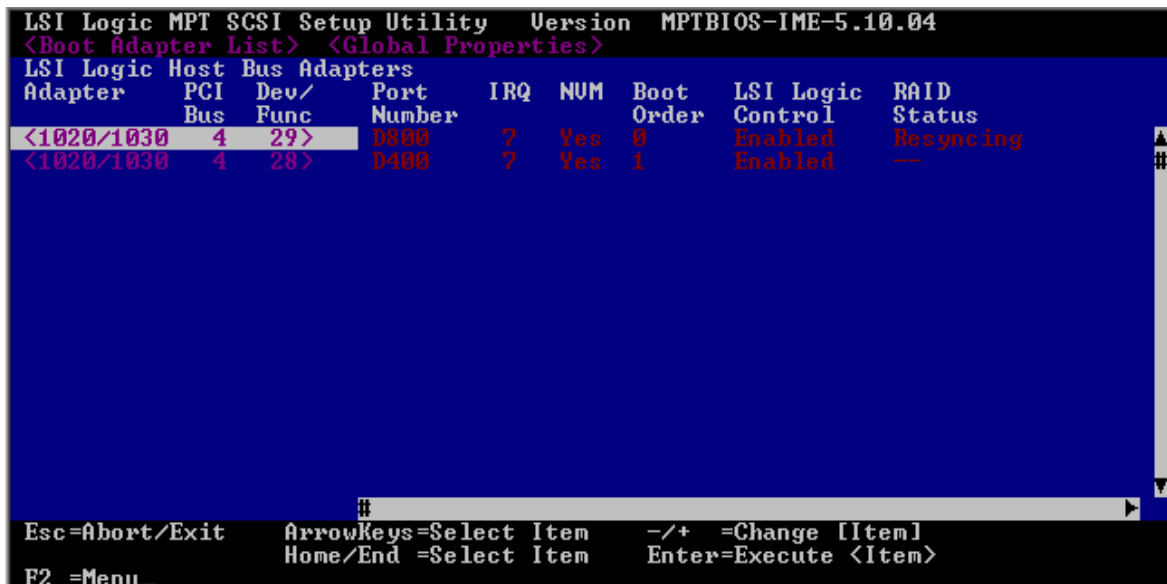


Figure 10. Integrated Mirroring: Return to Main menu

13. To enhance performance, it is not necessary to wait for the synchronization to finish. Synchronization can be done in the background. Press the <Esc> key to exit the Main menu. Then choose <Exit the Configuration Utility> to finalize the IM setup.

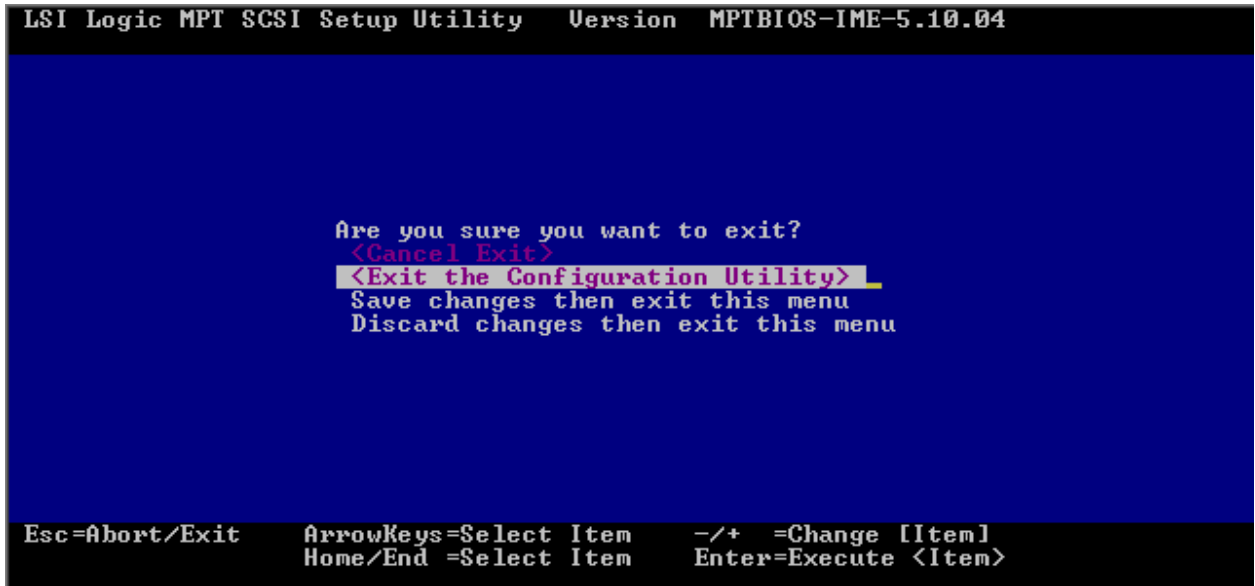


Figure 11. Integrated Mirroring: Confirm Exit the utility

Now the IM is ready to use after system reboot. The synchronization will be run in background and the operating system can now be installed, synchronization will continue during the installation and complete much more quickly once the operating system is installed.

### 3.3 Integrated Striping Configuration Procedure

Follow the steps below to build an Integrated Striping set of disks.

1. During the system POST, press F2 to enter Bios setup. Ensure the on Board SCSI Mode be set to "IS", save configuration and reboot. Please refer to Intel® Server Board users guide for system Bios setup.
2. Press <Ctrl>+<C> during POST when prompted to do so by the RAID card BIOS. See the following figure.

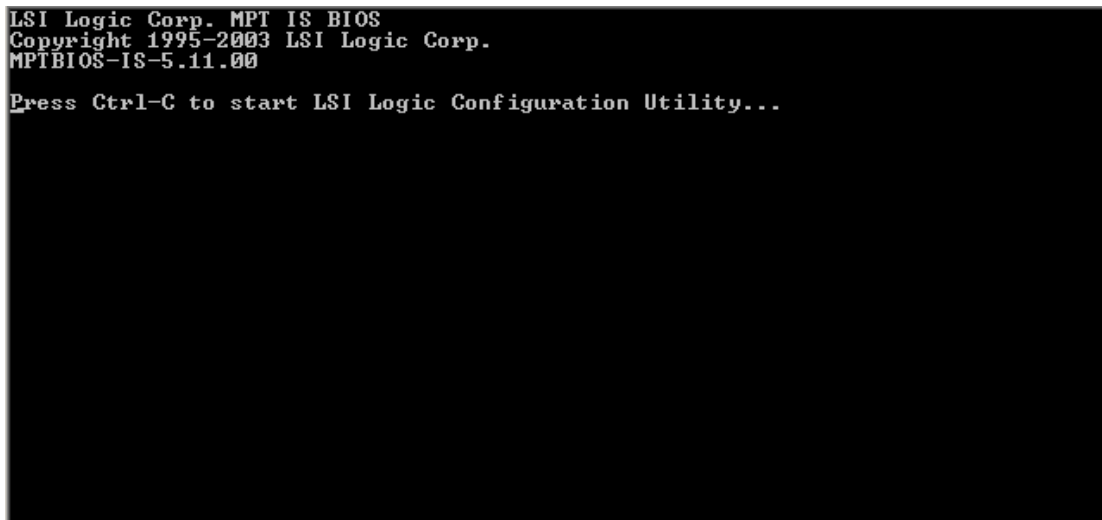


Figure 12. Integrated Striping: System Boot Screen

The main configuration screen is displayed, as shown below.



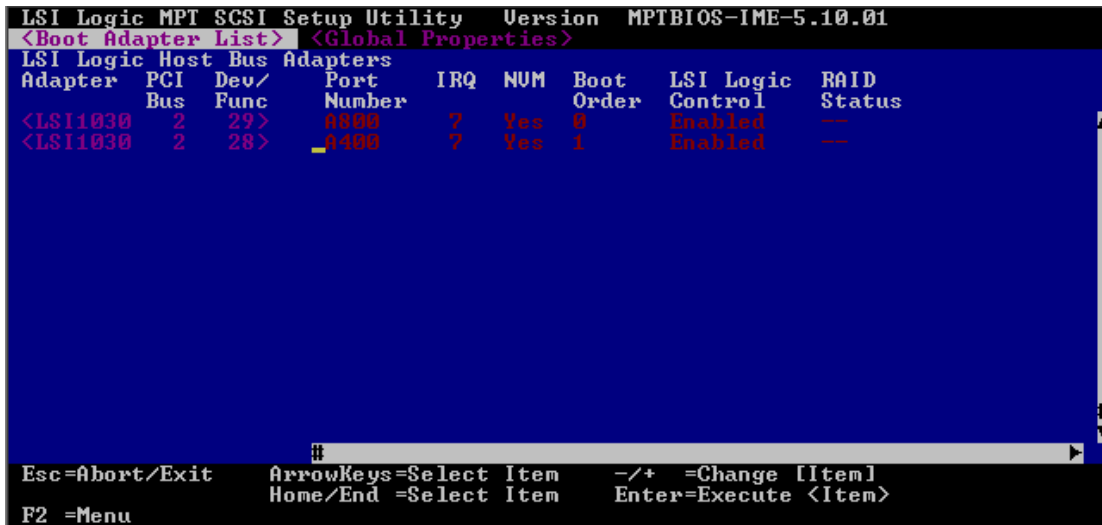


Figure 13. Integrated Striping: Main Menu

- Use the up and down arrow keys to locate the adapter.
- Press <Enter> to view the Adaptor properties. See the figure below.

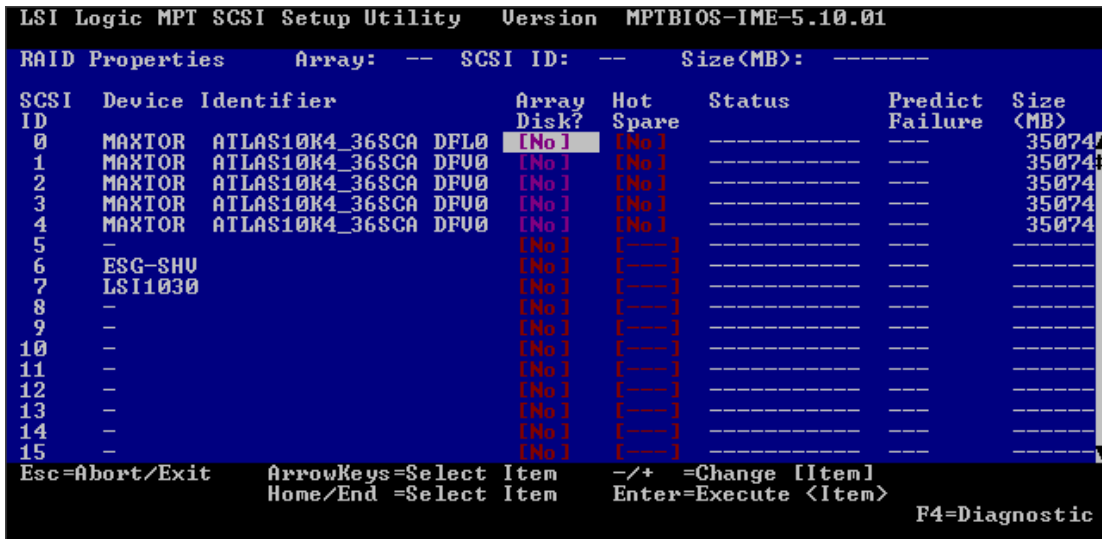


Figure 14. Integrated Striping: Select Array Disk

- Use the arrow keys on the Select Array Disk screen to select the first disk for the array.
- Use the arrow keys to move to the “Array Disk?” column.
- Press the <+> key to change the value in the “Array Disk?” column from “No” to “Yes”.

## Quick Configuration Guide

A warning message is displayed to tell you data on the disk will be lost. Cancel the operation if you want to keep the data, otherwise chose erase the data and continue.

8. Repeat steps 12 through 16 to add other disks to the array.
9. Press <Esc> to exit the configuration screen.
10. Select “<Save changes then exit this menu>” and press <Enter> confirm the change and return to main menu.

```
LSI Logic MPT SCSI Setup Utility  Version  MPTBIOS-IME-5.10.01

RAID Properties Changed
<Cancel Exit>
Exit the Configuration Utility
<Save changes then exit this menu>
<Discard changes then exit this menu>

Esc=Abort/Exit  ArrowKeys=Select Item  -/+ =Change [Item]
Home/End =Select Item  Enter=Execute <Item>
```

Figure 15. Integrated Striping: Save Changes

The IS volume is created and synchronization starts immediately. Verify the RAID properties on the screen; the “RAID Status” column should show “Optimal” as shown below.

## Intel Integrated RAID Configuration Guide

```
LSI Logic MPT SCSI Setup Utility   Version  MPTBIOS-IS-5.11.00
<Boot Adapter List> <Global Properties>
LSI Logic Host Bus Adapters
Adapter  PCI  Dev/  Port  IRQ  NUM  Boot  LSI Logic  RAID
         Bus  Func  Number  Number  Yes  Order  Control  Status
<LSI1030 2  29>  8000  7  Yes  0  Enabled  --
<LSI1030 2  28>  8400  7  Yes  1  Enabled  Optimal
```

Esc=Abort/Exit    ArrowKeys=Select Item    -/+ =Change [Item]  
F2 =Menu        Home/End =Select Item    Enter=Execute <Item>

Figure 16. Integrated Striping: RAID Status Screen

11. Press <Esc> to exit the configuration utility. The system will reboot automatically to finalize the configuration.